

OKI pro920 WT Imaging Instructions

Removing the White Background in Photoshop

Overview

This document describes how to edit files for printing from the OKI proColor 920 WT without the white background in Adobe Photoshop CS. These instructions are only relevant to the OKI proColor 920 WT. If you are using a vector file or file with a transparent background in Illustrator, for instance, you can print directly from the file without editing.

Procedure

 
1. Load the image data



2. Use a selection tool (Magic Wand function here) and click the background. You may use a Lasso Tool for detail.



3. Once you are finished selecting the entire image including small details, perform the Inverse. Go to Select and click Inverse.

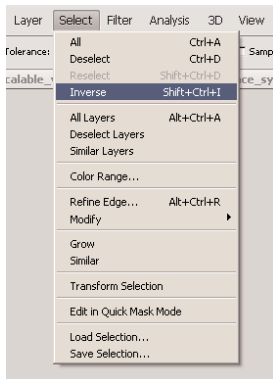


APP GUIDE


OKI pro920 WT Imaging Instructions

Removing the White Background in Photoshop

 4. Click the arrow of Paths and perform the Make Work Path menu.

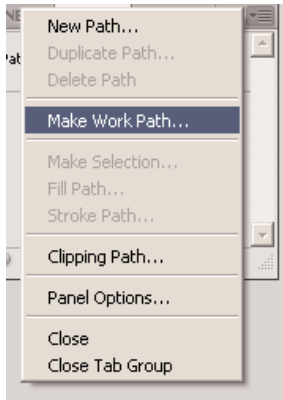

 5. Input the value of Tolerance.

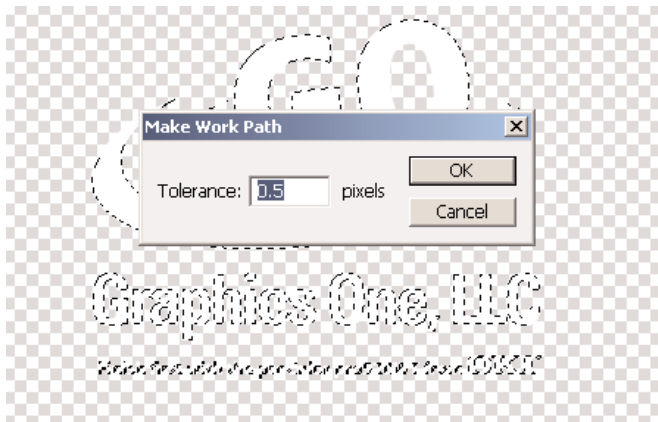

Note: If you want to select only the printable image, use a smaller value such as 0.5. The larger the Tolerance, the more white will appear around your selected image.

6. Click the arrow of Paths and perform the Save Path menu.
- Click OK to save Working Path as Path 1.
7. Click the arrow of Paths and perform the Clipping Path menu.
- Click OK to select Path 1 as Clipping Path.
8. Save the image data by Photoshop format (PSD).
9. Select the Print with Preview menu.
10. Print the image according to your personal specifications.